



T-RUNNER TAP_N+T-RUNNER TAP_B
Volume, Tone, 3-way switch, push-pull